



Notes

1. CB Shield can be installed at any time. In a non frozen condition.
2. The frame and cover should be well aligned with the catchbasin for proper installation
3. The catchbasin sump must be clean before installation
4. The grate should be at the same level as the standing water in the sump.
5. Pipes must be cut flush with inside walls

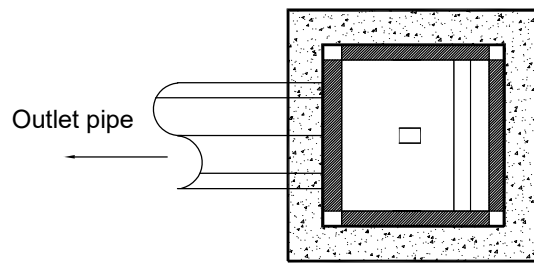

Top view

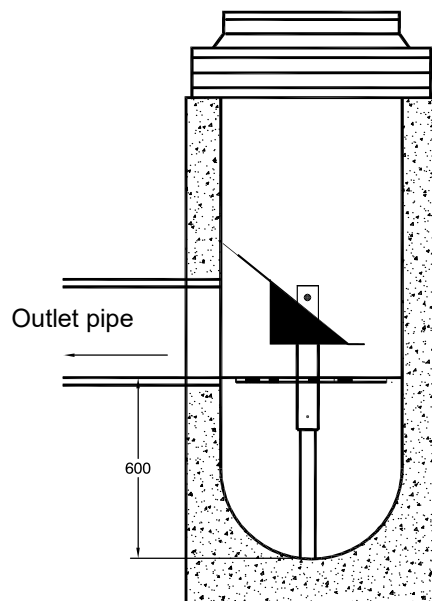

Profile view



CB Shield (600mm Sump)